



DISASSEMBLE THE OCTA 5&7

OPERATING INSTRUCTIONS – BEDIENUNGSANLEITUNG

PLEASE ALSO REFER TO THE LUMINAIRE INSTRUCTIONS REGARDING USE OF ACCESSORIES.

L2.0016159 / SBAR05
L2.0016165 / SBAR07
L2.0016163 / SRADB05
L2.0016160 / SRADB07



1.) Unpack and unfold the SNAPBAG® OCTA.




A

ONLY OCTA 7



B

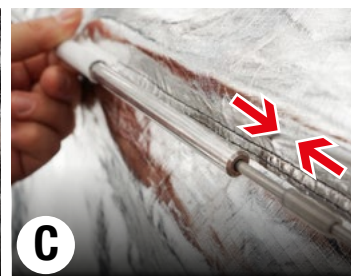

C


2.) Push the rod extensions to the front and connect them to the other rod-end.



3.) Release the Velcro® strips.



4.) Push in the 2 upper rods first to the RABBIT-EARS® – continue with all other rods.

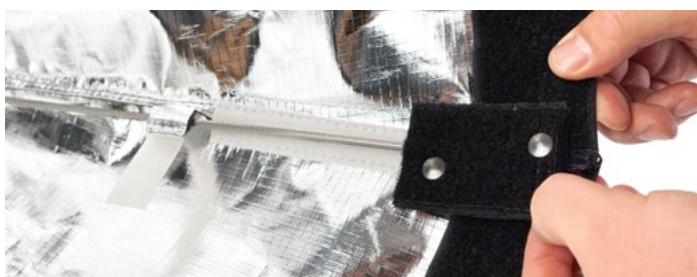

5.) Attach the Velcro® strips to the end of the SNAPBAG®. Make sure the SNAPBAG® is on full tension by utilizing the Velcro® strips before installing the diffuser.



SAFETY INSTRUCTIONS



dopchoice.com/instructions/





DISASSEMBLE THE OCTA 5&7

OPERATING INSTRUCTIONS – BEDIENUNGSANLEITUNG

PLEASE ALSO REFER TO THE LUMINAIRE INSTRUCTIONS REGARDING USE OF ACCESSORIES.

L2.0016159 / SBAR05
L2.0016165 / SBAR07
L2.0016163 / SRADB05
L2.0016160 / SRADB07



1.) Take off the diffuser, fold it together and put it back into the plastic bag.



2.) Release the Velcro® strips to take off the tension on the rods.



3.) Pull out the rod ends on the RABBIT-EARS® – start with the lower ones first.



ONLY OCTA 7

4.) Release the rod extensions and pull them back to the very end of the white elastics.



5.) Fold the SNAPBAG® together as shown in the picture.

ONLY OCTA 7



6.) **Important:** the rod extensions must be pulled back to the very end in order to fold the SNAPBAG® as shown in the picture!



7.) Put the SNAPBAG® back into the designated transportation bag.